

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

Before Use

- Inspect for damage and replace if necessary:
 - Outer shroud ensure it is free from tears and its gasket is inserted properly.
 - Inner collar.
 - Visor frame to jaw gasket.
 - · Visor, its surround and gasket.
 - Helmet shell.
 - Forehead seal.
 - Head harness.
 - Comfort pad/s.
- Replace Peel Off visor covers (if used).

Monthly

 Carry out all the "Before Use" inspections thoroughly and create a record of this monthly check.

REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION


After Use

- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect surfaces with 3M[™] 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents





M-972

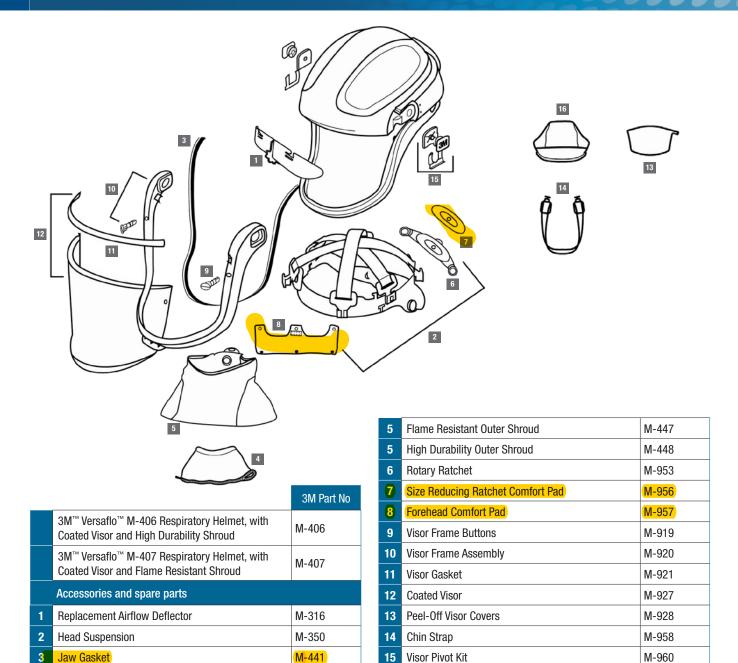

Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

Flame Resistant Headtop Cover

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.



Occupational Health & Environmental Safety Group 3M United Kingdom PLC 3M Ireland Limited

3M Centre, Cain Road, Bracknell Berkshire RG12 8HT Tel: 0870 60 800 60 www.3M.co.uk/ohes

Inner Collar

3M Ireland LimiteThe Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

M-444