



# 3M™ Versaflo™ M-400 Series Helmets



## Care and Maintenance

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

### Before Use

- Inspect for damage and replace if necessary:
  - Outer shroud – ensure it is free from tears and its gasket is inserted properly.
  - Inner collar.
  - Visor frame to jaw gasket.
  - Visor, its surround and gasket.
  - Helmet shell.
  - Forehead seal.
  - Head harness.
  - Comfort pad/s.
- Replace Peel Off visor covers (if used).

### Monthly

- Carry out all the “Before Use” inspections thoroughly and create a record of this monthly check.

### After Use

- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect surfaces with 3M™ 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents




**3M Health & Safety Helpline**  
Monday - Friday 9 to 5

0870 60 800 60 UK  
1 800 320 500 IRELAND

**EMR**  
**PELLTOR**

**REPLACE ALL DAMAGED PARTS IMMEDIATELY TO  
ENSURE CORRECT LEVELS OF PROTECTION**

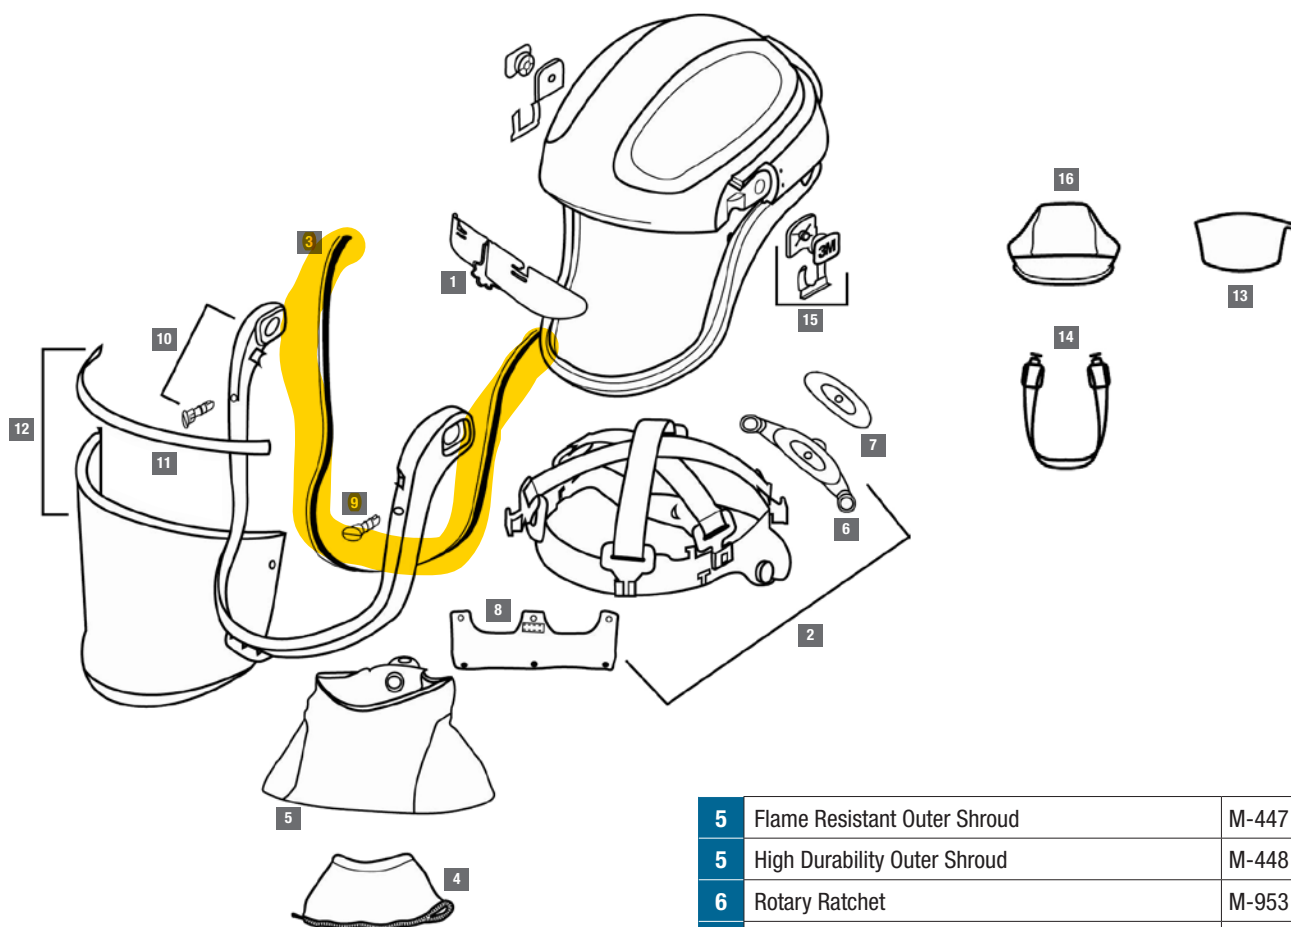

|  | 3M Part No   |
|--|--------------|
| 3M™ Versaflo™ M-406 Respiratory Helmet, with Coated Visor and High Durability Shroud | M-406        |
| 3M™ Versaflo™ M-407 Respiratory Helmet, with Coated Visor and Flame Resistant Shroud | M-407        |
| <b>Accessories and spare parts</b>   |              |
| 1 Replacement Airflow Deflector  | M-316        |
| 2 Head Suspension  | M-350        |
| 3 <b>Jaw Gasket</b>  | <b>M-441</b> |
| 4 Inner Collar   | M-444        |

|                                     |       |
|-------------------------------------|-------|
| 5 Flame Resistant Outer Shroud      | M-447 |
| 5 High Durability Outer Shroud      | M-448 |
| 6 Rotary Ratchet                    | M-953 |
| 7 Size Reducing Ratchet Comfort Pad | M-956 |
| 8 Forehead Comfort Pad              | M-957 |
| 9 Visor Frame Buttons               | M-919 |
| 10 Visor Frame Assembly             | M-920 |
| 11 Visor Gasket                     | M-921 |
| 12 Coated Visor                     | M-927 |
| 13 Peel-Off Visor Covers            | M-928 |
| 14 Chin Strap                       | M-958 |
| 15 Visor Pivot Kit                  | M-960 |
| 16 Flame Resistant Headtop Cover    | M-972 |

### Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

### Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.



**Occupational Health & Environmental Safety Group**  
**3M United Kingdom PLC**  
 3M Centre,  
 Cain Road, Bracknell  
 Berkshire RG12 8HT  
 Tel: 0870 60 800 60  
[www.3M.co.uk/ohes](http://www.3M.co.uk/ohes)

**3M Ireland Limited**  
 The Iveagh Building  
 The Park  
 Carrickmines  
 Dublin 18  
 Tel: 1 800 320 500

Please recycle.  
 Printed in the United Kingdom.  
 © 3M 2010. All rights reserved.