

FORCE™ 8-800 HALF MASK FACE RESPIRATOR

ONE OF THE LIGHTEST, MOST WELL BALANCED HALF FACE MASKS AVAILABLE IN 3 DIFFERENT SIZES
PRODUCT CODES: SMALL: BHG003-1L5-000 MEDIUM: BHT003-0L5-000 LARGE: BHG003-2L5-000

TECHNICAL SPECIFICATION

RESPIRATORY PROTECTION

INSTRUCTIONS FOR USE

Place the respirator over the mouth and nose, then pull the harness over the crown of the head

Take the bottom straps in both hands, place them at the back of the neck and hook them together


Tighten the top straps first by pulling on ends to achieve a comfortable and secure fit

Tighten bottom straps using either front or rear adjustments (Strap tension may be decreased by pushing out on back side of buckles)

Perform a positive and/or negative pressure fit check

CR2 REFLECTIVITY:

Reflective strips create increased visibility in low-light environments for added safety

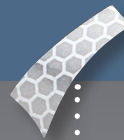

FACEPIECE:

Thermoplastic Elastomer
Padded for extra comfort over prolonged use, and moulds to face shape for excellent seal

TYPHOON VALVE:

Polycarbonate valve casing and silicon diaphragm

FORCE FACE SIZE GUIDE:

Use this face size guide to determine whether you are small, medium or large to create the optimal face seal



SIZES



Small 8-810



Medium 8-820



Large 8-830

CLEANING & MAINTENANCE

Cleaning is recommended after each use. Remove the filters

Clean the facepiece (excluding filters) using a cloth moistened with a weak detergent solution and allow to air dry in a non-contaminated atmosphere

If filter cartridge is to be reused do not remove from respirator but clean with a cloth and warm soapy water and dry with a clean cloth

Respirator components, especially exhalation valve and seat, should be inspected prior to each use. A respirator with any damaged or deteriorated components should be discarded

The cleaned respirator should be stored away from contaminated areas when not in use



CONFORMITY

Half mask conforms to EN140

EC Type Examination Certificate Number 676977

